



Sony NWZ-E473 Screen Replacement

This guide will show you how to remove your screen for replacement.

Written By: Matthew Hintz



INTRODUCTION


When removing the screen, you may want to use gloves so that no glass shards cut your hands.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Initial screw removal

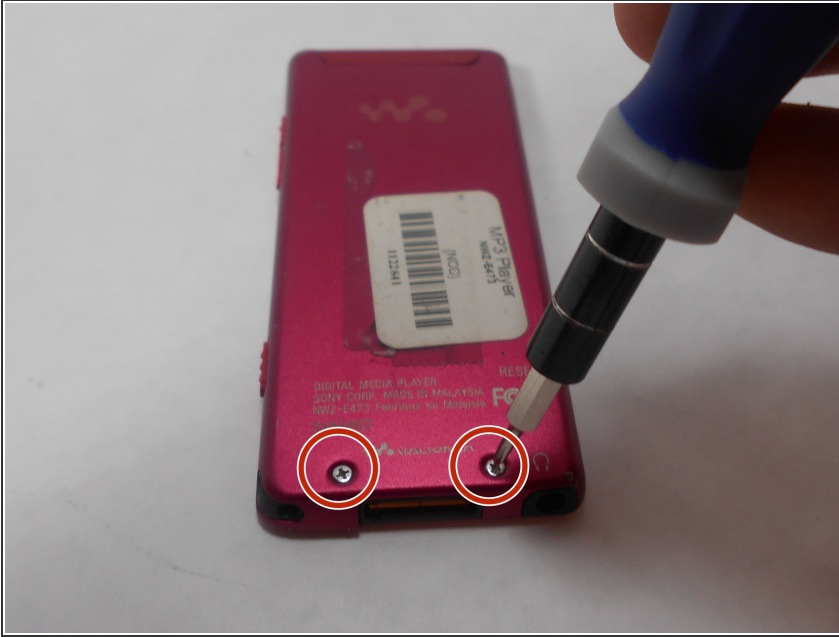

- Unscrew two 5 mm Phillips #00 screws using a Phillips #00 screwdriver located on the bottom of the back of the device.

Step 2 — Using a prying tool, loosen bottom portion of device.



- Using a plastic opening tool, loosen the bottom portion of device.

Step 3 — Using prying tool, loosen top panel of the device.



- Using a plastic opening tool, loosen the top panel of the device.

Step 4 — Remove screws from portion under top panel of the device.



- Remove two 3 mm Philips #00 screws using a Phillips #00 screwdriver located on the portion under the top panel of the device.

Step 5 — Remove back plate from device.



- Remove back plate from device.

Step 6 — Screen




- Remove plastic USB cover using tweezers and spudger.

Step 7




- Unscrew two 2 mm Philips #00 screws using a Phillips #00 screwdriver located on the top corners of the device.

Step 8

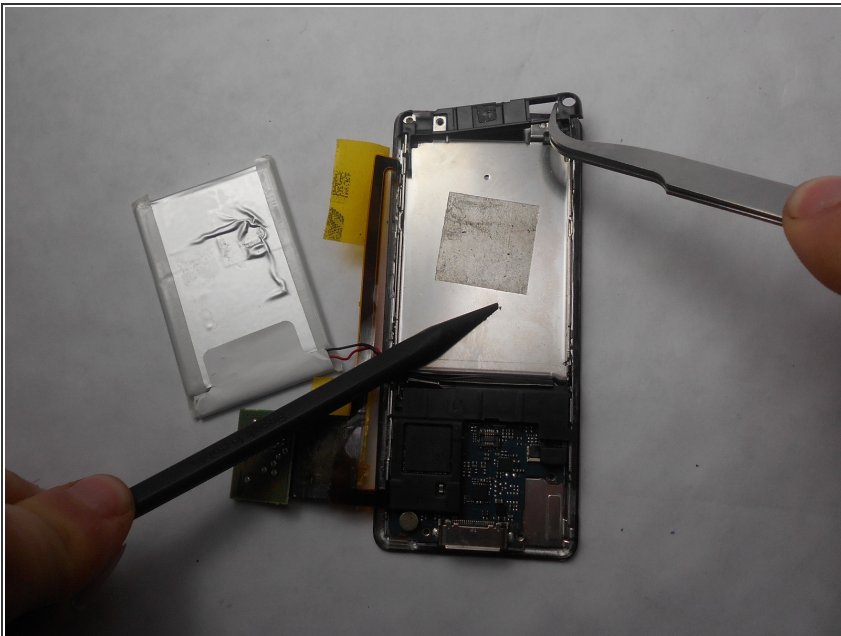

- Remove plastic protective plate at top of device using tweezers and spudger.

Step 9

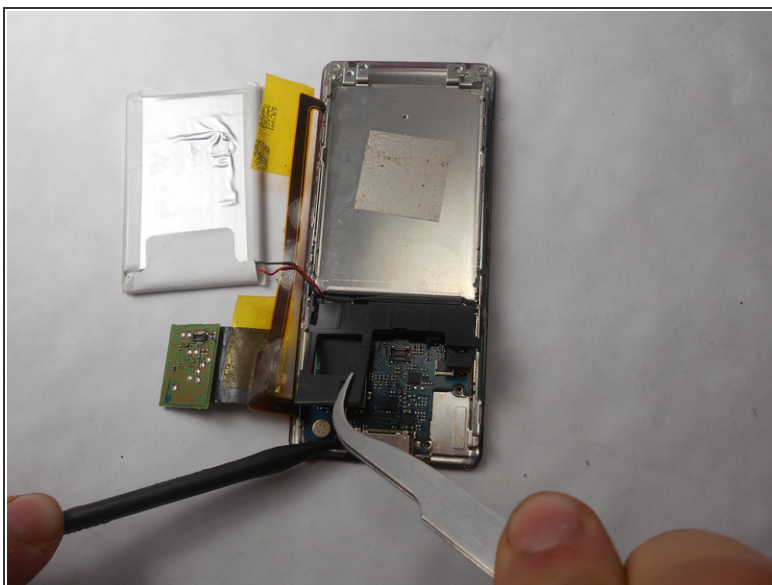


- Remove plastic protective frame located over the motherboard using tweezers and spudger.

Step 10




- Remove screen connection from motherboard using tweezers and spudger.

Step 11

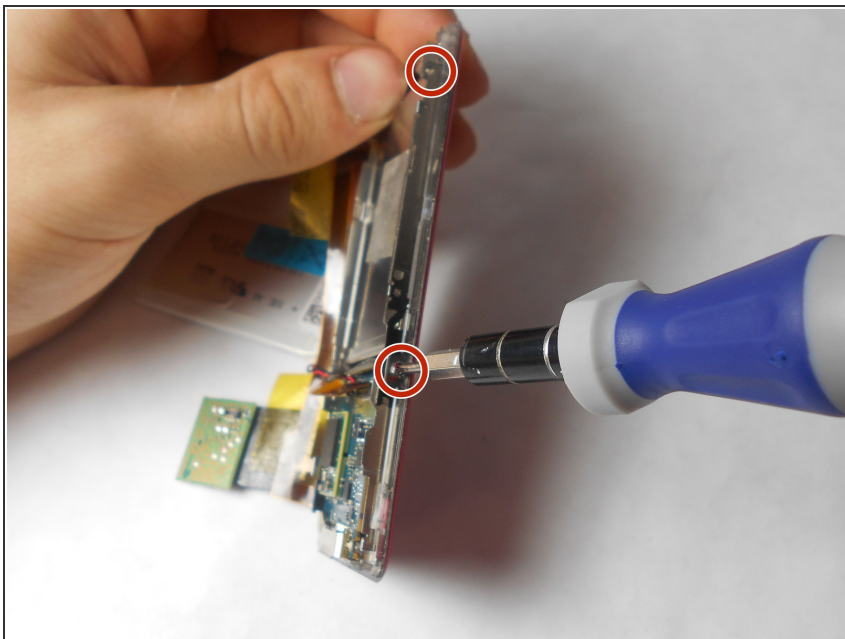



- Remove two 3 mm Philips #00 screws at the bottom sides and two 1 mm Philips #00 screws at top sides of the device using a Phillips #00 screwdriver.

Step 12

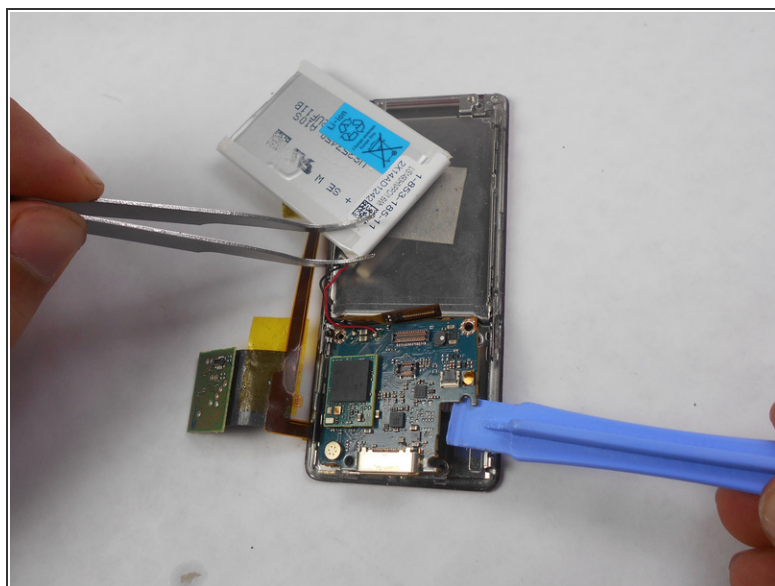



- Using a Phillips #00 screwdriver, unscrew two 2 mm Philips #00 screws and remove motherboard from device using tweezers and prying tool.

Step 13

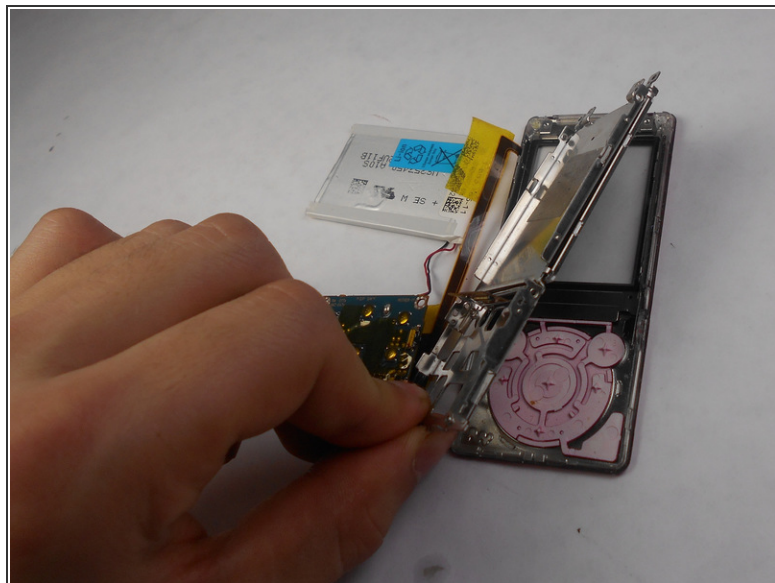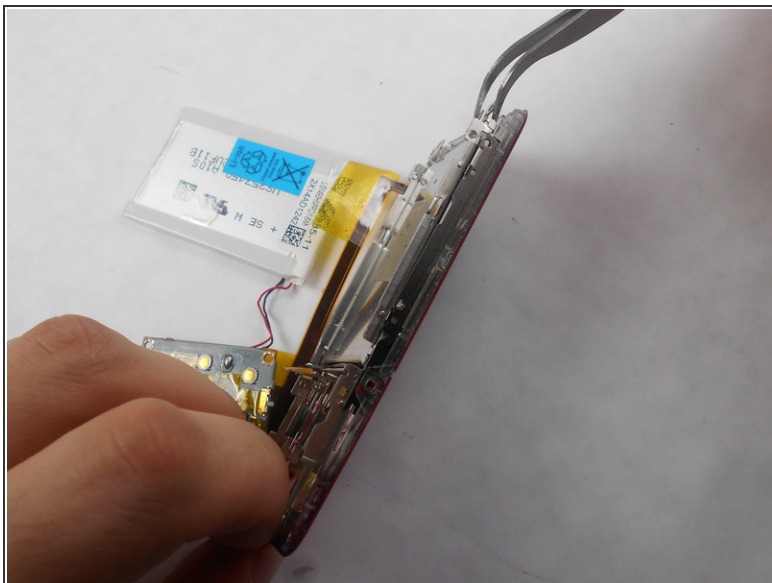

- Disconnect metal plate from front panel of device using tweezers.

Step 14

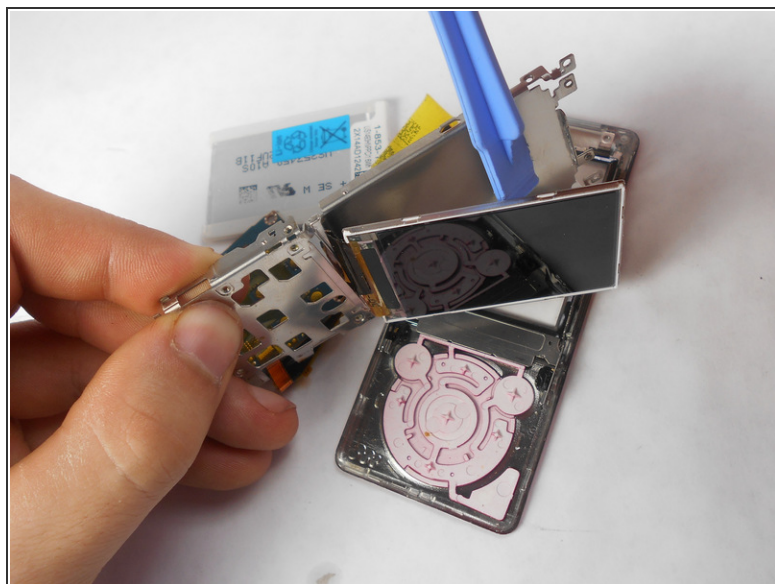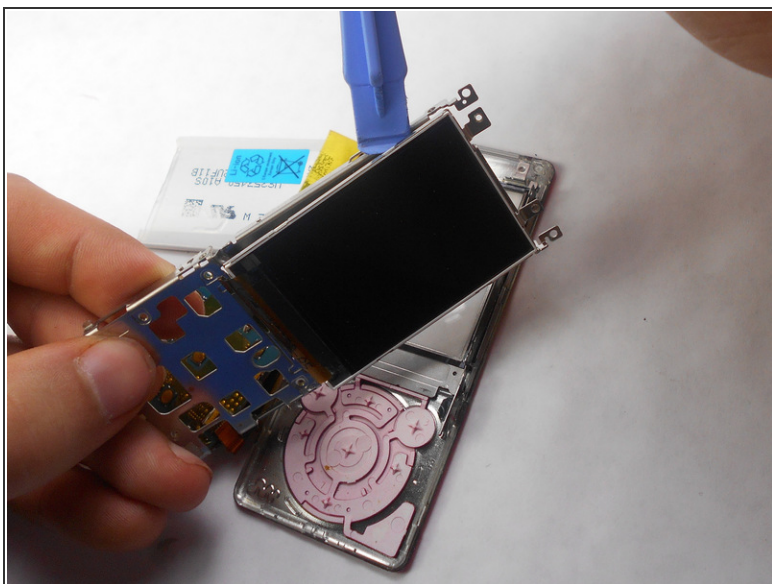

- Using a prying tool, remove screen from metal back plate.

To reassemble your device, follow these instructions in reverse order.

